


**63100**

## Two-Zone Automatic Water Timer

User Instructions ■ English

63100\_INS\_ENG\_01

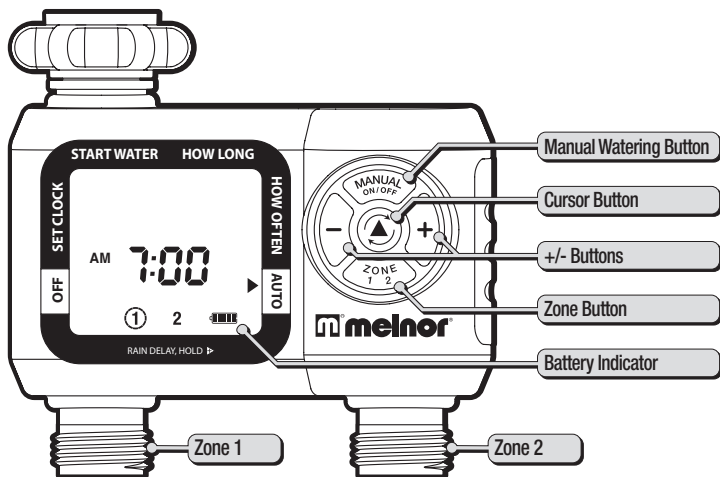

### 1 Understanding Zones

This is a two zone timer allowing you to water two different areas from the same faucet. Each zone can be programmed with up to four different start times.

### 2 Battery Installation & Assembly

Remove the battery holder from the back of the **Timer Control Unit**. Insert two AA alkaline batteries (Do not use rechargeable batteries) as indicated on the battery holder. Replace the battery holder, making sure that it is firmly and securely placed in the **Timer Control Unit**.

**NOTE:** Do not use your timer when the air temperature is below 40°F (4.5° C). When storing your timer, be sure it is in a dry place and protected from frost.



We recommend replacing batteries when the indicator reaches

### Installation of the Timer

Attach the timer to an outside faucet and turn on the water. The water must be left on while the timer is attached to the faucet for your timer to operate.

**NOTE:** You may choose to program your timer before or after attaching it to the faucet.

### 3 SETTING THE CLOCK

Touch any button to wake the timer.

Using the button, move the arrow to **SET CLOCK**.

Press the & buttons to adjust the clock to the current time.

Press the button again to set the time and move to the next setting, **START WATER**.



### 4 SELECT WHEN TO WATER

With the arrow pointing to **START WATER**, use the & buttons to select the first time of the day you want to water. All remaining watering cycles during the day will be based on this time.

Press the button to move to the next setting.

**Note:** You will see **Zone 1** highlighted at the bottom of the screen; program Zone 1 before moving on to Zone 2.



### 5 SELECT HOW LONG TO WATER

With the arrow pointing to **HOW LONG**, use the & buttons to select the length of each watering cycle.

Cycles can be up to **360 minutes (6 hours)** in duration.

Press the button to move to the next setting.



### 6 SELECT HOW OFTEN TO WATER

With the arrow pointing to **HOW OFTEN**, use the & buttons to select the watering frequency.


Watering can be as often as **Every 1 Hour** or little as **Every 7 Days (once per week)**.




		SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
EVERY WEEK	EVERY 1 DAY	●	●	●	●	●	●	●
	EVERY 2 DAY	●		●		●		●
WEEK ONE	EVERY 3 DAY	●			●			●
	WEEK TWO		●			●		
WEEK ONE	EVERY 4 DAY	●				●		
	WEEK TWO		●				●	
WEEK ONE	EVERY 5 DAY	●					●	
	WEEK TWO		●					●
WEEK ONE	EVERY 6 DAY	●						●
	WEEK TWO		●					
WEEK ONE	EVERY 7 DAY	●						●
	WEEK TWO		●					

## 7 SETTING ANOTHER ZONE

When you have set **START WATER**, **HOW LONG** and **HOW OFTEN** for Zone 1, press the  button to go back to **START WATER**.

Press  to select Zone 2, and repeat steps 4-6 above.

When all desired zones are set, press the  button to enter **AUTO** mode.



## 8 AUTO MODE

After programming, the timer will be in **AUTO** mode.

The screen display will alternate between showing the current time and the next watering cycle of each zone.

If the next watering cycle is more than 24 hours away, the **NEXT START TIME** will be displayed in days instead showing a time.





## 9 RAIN DELAY MODE


If there is rain in the forecast, you can temporarily suspend your watering program on both zones for up to 7 days using the **RAIN DELAY** feature.

**RAIN DELAY** mode will stop all watering for up to 7 days.

After the selected delay has ended, your watering program will automatically resume.

To activate **RAIN DELAY** mode, make certain the arrow is pointing to **AUTO**. Press the  key to select the delay period. You can reduce the delay period with the  key.

In **RAIN DELAY** mode, the screen will toggle between the current **TIME** and the remaining **DELAY** time. If the delay is greater than 12 hours, the **DELAY** will be shown in **DAYS**.

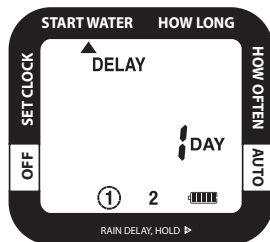

## 10 OFF MODE

If you wish to stop watering for an extended period, push the  button until the arrow is pointing to **OFF**.

The timer will not water automatically while in this mode. The screen will display the word **OFF** in large letters.


To start watering automatically again, simply press the  button until the arrow is pointing to **AUTO**. The program will begin watering at the next available **Start Time**.

**Note:** Watering will be stopped for both zones when this feature is activated.



## 11 MANUAL WATERING

To use a hose or other watering tool, simply press the  button. Then use the  button to select which zone you want to use.

Using the  button, select the length of time you wish to water. After a few seconds, the valve will open, and then automatically close when the selected time is reached.

To quit the manual function, press the  button again.

**Note:** The timer will hold the last manual time in its memory. To reset the manual time back to zero, press the arrow keys to adjust the time.



## 12 TIMER RESET

If you need to completely erase all settings in the timer and return it to its original state, press and hold the  button for 7 seconds.

The screen will display **RESET**.

**NOTE:** All programming will be lost when the timer is **RESET**.

